




PERRY'S TENTS & EVENTS

550 S. OLD TELEGRAPH RD.

PONTIAC, MI 48341

PH. (248) 334-1577 FAX (248) 334-3370 perrystentsandevents.com

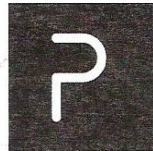

manufactured fun

P A R A G O N

OPERATING INSTRUCTIONS



OPERATING INSTRUCTIONS

* Connect to proper grounded 120 volt supply.

1. Turn on LIGHT switch (located inside cabinet on top left). Light will come on in cabinet.
2. Turn on KETTLE/MOTOR switch (located next to LIGHT switch) and wait about 4 to 6 minutes.
3. Place one measure of oil in kettle (1/3 cup). Immediately add one measure of raw popcorn (8 ounces) plus seasoning salt.
4. While corn is popping, keep front plexiglas doors slightly open to prevent fogging. Keep hopper door at "out" position to aid in catching stray popped corn.
5. Allow corn to pop until popping ceases; then dump remaining popped corn from kettle by rotating handle clockwise 1/3 turn and pulling downward.
6. Repeat steps 1-5 for additional batches of corn.
7. Wipe excess oil from exterior and interior of kettle as often as possible to prevent burned-on oil stains.

NEVER USE WATER ON ANY PART OF THE KETTLE!

Always turn KETTLE/MOTOR switch OFF when machine is not in use.

KETTLE CARE

The PARAGON exclusive popcorn kettle, with patented heater arrangement, consists of a double (two part) unit for maximum efficiency at minimum expense with low cost maintenance.

NOTE: To avoid heavy build-up of deposits that require specialized cleaning, please follow these instructions:

CAUTION: NEVER USE WATER IN ANY MANNER ON KETTLE!

1. Wipe, with soft towel or cloth, excess oil from exterior and interior of kettle as often as possible.
2. Excessive or careless use of popping oil may result in kettle damage.
3. Turn off KETTLE/MOTOR switch when popping is complete.
4. For heavily carbonized kettles, the use of **PARAGON Kettle Cleaning Kit** (part# 1075) is highly recommended.